

23. Install steering wheel (I), lock washer (G) and nut (H). Tighten nut, and bend tab (F) to prevent nut from turning.

24. Install washer (E).


25. Install knob (D), washer (C) and lock nut (B).

26. Install cover (A).


27. Install instrument panel. (See Replace Instrument Panel—Isolated Open Operator Station and Cab Tractors or Replace Instrument Panel—Straddle Mount in Section 40, Group 10.)

28. Connect battery negative (—) cable.


- A—Cover
- B—Lock Nut
- C—Washer
- D—Knob
- E—Washer
- F—Tab
- G—Lock Washer
- H—Nut
- I—Steering Wheel

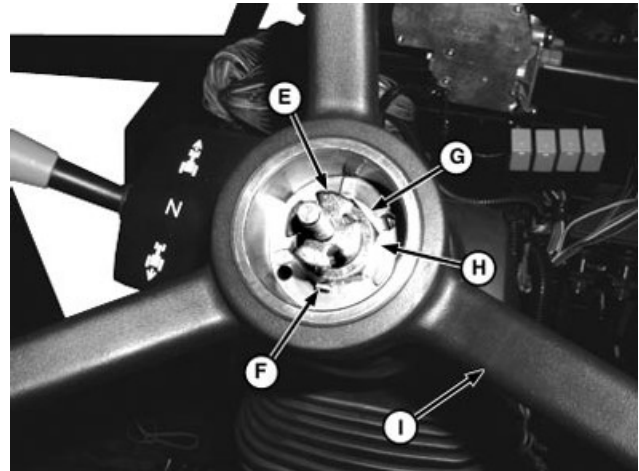

LV10895 -JUN-06OCT04

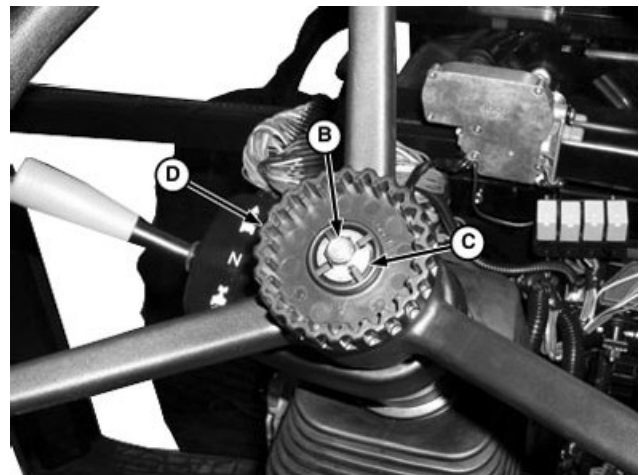

LV10894 -JUN-06OCT04

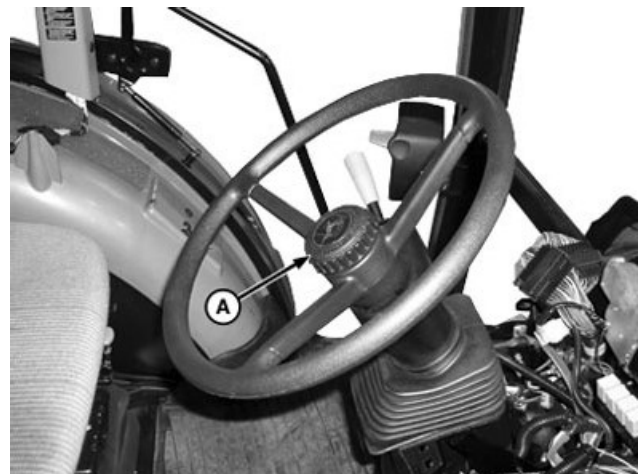

LV10893 -JUN-06OCT04

JG31785,00001B2 -19-15NOV04-5/5

Replace Park Switch—POWRREVERSER™ Transmission

NOTE: The park switch is located just to the left of the gear and range shift tower.

1. Disconnect battery negative (—) cable.
2. Disconnect wire connector (A).
3. Replace park switch (B) and O-ring.
4. Connect wire connector (A).
5. Connect battery negative (—) cable.



A—Wire Connector
B—Park Switch


POWRREVERSER is a trademark of Deere & Company

JG31785,00001B3 -19-15NOV04-1/1

40
10
79

Replace Brake Pedal Switch—Electro-Hydraulic Tractors

1. Disconnect battery negative (—) cable.
2. Remove cowl cover. (See Remove and Install Cowl Cover in Section 90, Group 06.)
3. Remove socket head screws (A).
4. Remove brake pedal switch (B) from bracket, and disconnect wire connector (C).
5. Connect wire connector (C) to new brake pedal switch (B) and install switch with socket head screws (A).
6. Install cowl cover. (See Remove and Install Cowl Cover in Section 90, Group 06.)
7. Connect battery negative (—) cable.

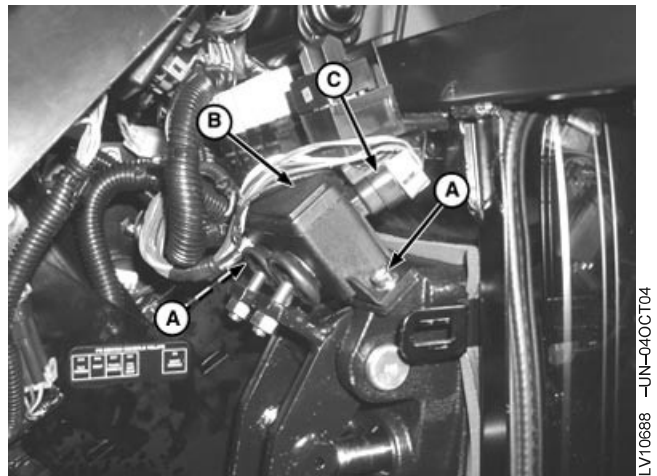

A—Socket Head Screw (2 used)
B—Brake Pedal Switch
C—Wire Connector

JG31785,00001B4 -19-15NOV04-1/1

Replace Hi/Lo Shifter Switch— POWRREVERSER™ Transmission

1. Disconnect battery negative (—) cable.
2. Remove three screws (A) and cover (B).
3. Disconnect wire connector (C).
4. Remove Hi/Lo switch (D).
5. Install new Hi/Lo switch (D).
6. Connect wire connector (C).
7. Install cover (B) and screws (A).
8. Connect battery negative (—) cable.

A—Screws (3 used)
B—Cover
C—Wire Connector
D—Hi/Lo Switch



LV10557 -JUN-15SEP04



LV10558 -JUN-15SEP04

POWRREVERSER is a trademark of Deere & Company

JG31785,00001B5 -19-15NOV04-1/1


Replace Mid-Mount Solenoid Switch

1. Disconnect battery negative (—) cable.
2. Cab Tractors: Remove right-side upholstery. (See Remove and Install Right-Side Upholstery in Section 90, Group 15.)
3. Disconnect wire connector (A).
4. Remove screw (B) at the base of the joystick cover.
5. Pull floor mat away from the base of the joystick housing.
6. Remove screw and nut (C).
7. Remove screw (D) and cover (E).

A—Wire Connector
 B—Screw
 C—Screw and Nut
 D—Screw
 E—Cover



LV11091 -UN-14OCT04

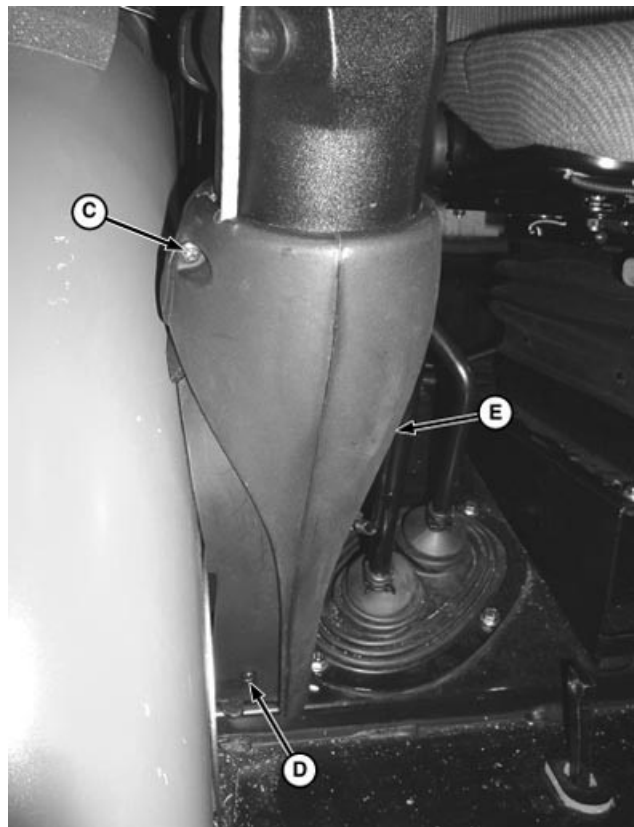

LV11092 -UN-14OCT04

Continued on next page

JG31785.00001B6 -19-15NOV04-1/5